Roanoke City Municiple South Heating

REVISED

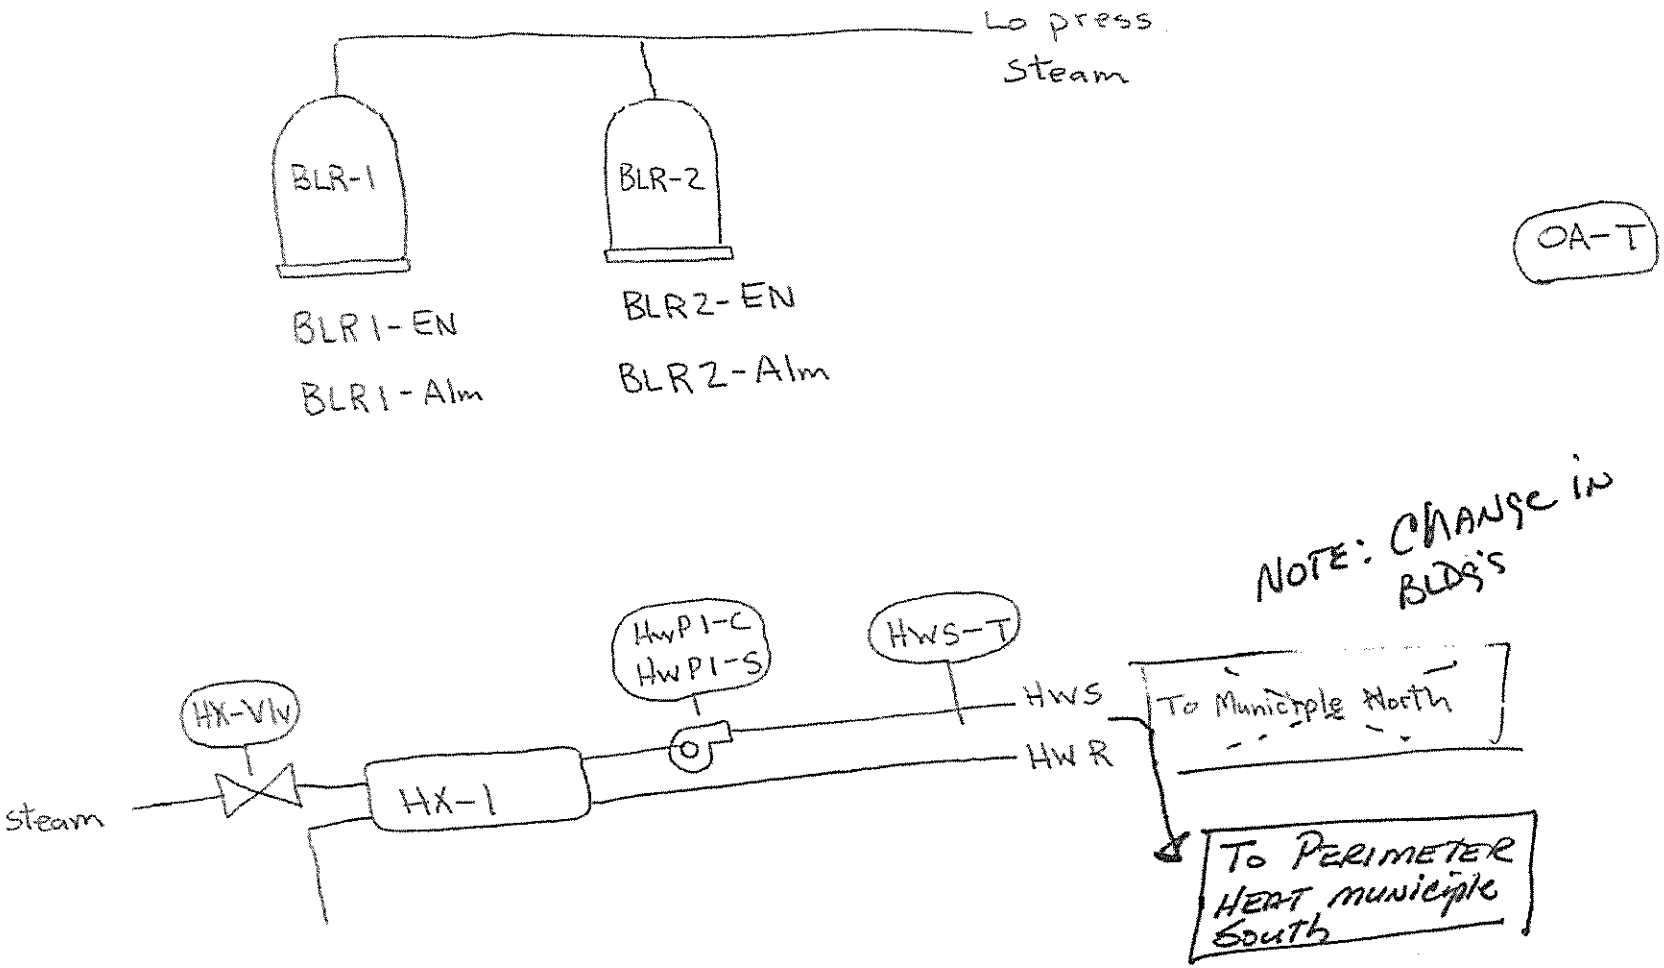

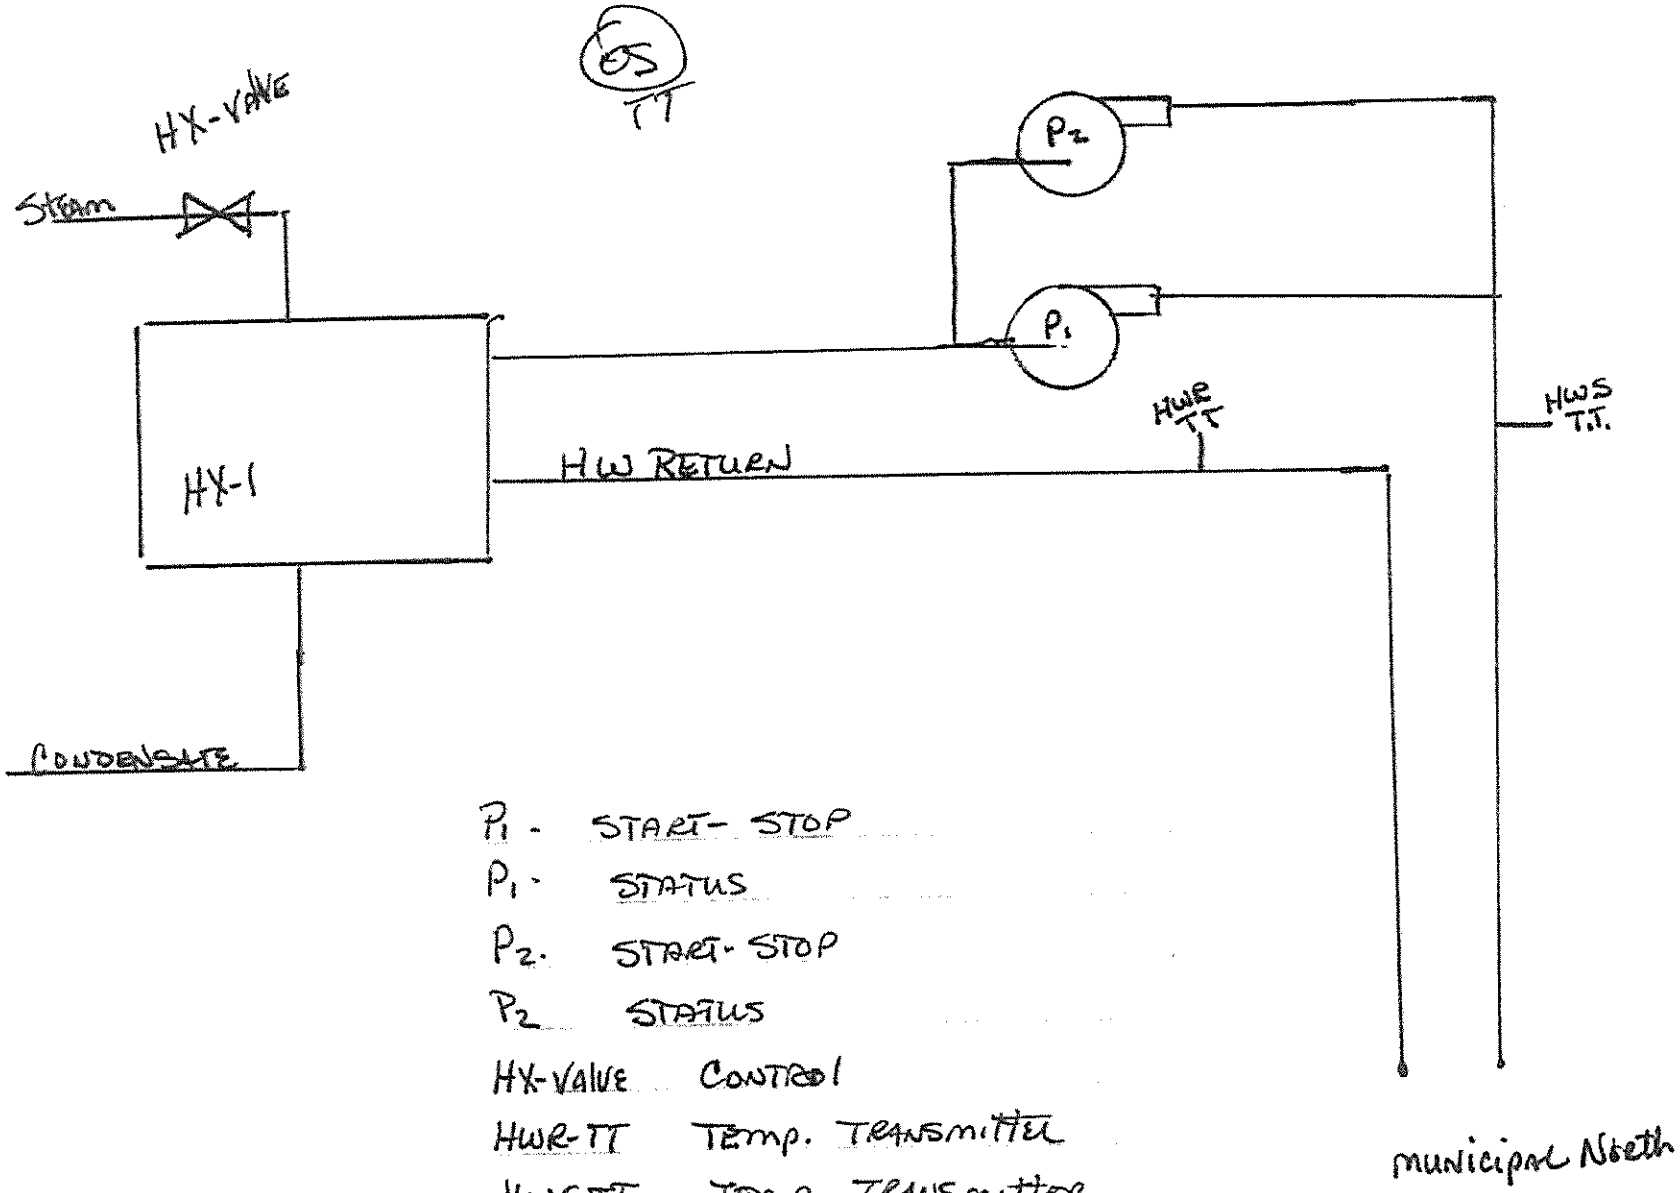

P_1 - START- STOP

P_1 - STATUS

P_2 - START- STOP

P_2 STATUS

HX-VALVE CONTROL

HWR-TT TEMP. TRANSMITTER

HWSTT TEMP TRANSMITTER

RESET SCHEDULE 0° — 180°

70° — 100°

OS TT OUTSIDE AIR TRANSMITTER